

# CYANIDE COLORIMETRIC ANALYZER

Compact online analyzer for measurement of cyanide in water

## **APPLICATION FIELDS**

- · Drinking water
- Industrial waste water
- Municipal waste water
- Surface water



#### • Different compartments

To ensure complete separation between the electronics (upper case) and the wet part (lower case).

## • Low reagents consumption

Minimum operating cost by small reagent consumption, only 1.7 L (0.45 US.gal) for the 16 mm cell / 2.5 L (0.66 US.gal) for the 26 mm cell of each reagent every 30 days with 15 minute analysis frequency.

## • Automatic calibration / validation / cleaning

Validation, cleaning and calibration are standard features which significantly reduce downtime and operator intervention ensuring the most accurate results are obtained. Free selectable validation, cleaning and calibration intervals.

#### • Wide measuring range

The determination ranges of the Cyanide Analyzer vary from trace  $\mu g/L$  to 10 mg/L CN<sup>-</sup> using internal dilution module.



#### • Color touchscreen user interface


The colorimeter is equipped with a graphic touchscreen interface showing measured values and status information. Easy access to menus and functions. Integrated datalogger with USB download.

#### • Factory tested, ready for installation and operation

Just connect the power, sample, and reagent lines and the analyzer is fully operational.

## • Measurement principle


The cyanide ions present in the sample reacts with the chloramine-T and pyridine/barbituric acid reagents. The absorbance intensity is proportional to the cyanide concentration in the sample and is measured at 572 nm.

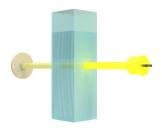

## **TECHNICAL SPECIFICATIONS**

Measured parameter	CN <sup>-</sup> Cyanide, free (ppb, ppm, mg/l).
Measuring principle	Differential colorimetric absorbance.
Measuring range	2 to 100 ppb CN <sup>-</sup> for the 26 mm cell, 10 to 200 ppb CN <sup>-</sup> for the 16 mm cell; up to 15 ppm CN <sup>-</sup> with internal dilution.
Reproducibility	± 4 ppb or ± 5%, whichever is greater (26 mm cell) ± 10 ppb or ± 5%, whichever is greater (16 mm cell)
Analysis Frequency	Freely programmable, batch near-continuous analysis.
Cycle time	15 - 18 minutes, including conditioning before analysis cycle and rinsing after measuring.
Reaction cell	Temperature heated
Sample	Pressure-free vessel Temperature: 5 - 50 °C (41 - 122 °F) Flow Rate: 80 to 500 mL/min Connection: 6 mm (¼-in.)
Drain	Pressure-free, atmospheric drain Connection: 12 mm (½-in.)
N° of streams	1, 2 with integrated switching valve
Dimensions (H x W x D)	604 x 380 x 242 mm (23.6 x 14.8 x 9.4 in)
Weight	Approx. 20 Kg (44 lbs)
Power Supply	Voltage: 100 - 240 VAC 50/60 Hz standard or 24 VDC (option) Power consumption: max. 80 VA
Outputs	2 x 4-20 mA outputs for measured data Modbus RTU RS485
Alarms	2 SPDT programmable potential free relays
Digital Input	Remote start/stop, start extra cycle, skip idle time, emergency stop
Working Temperature	5 - 45 °C (41 - 113 °F)
Humidity	10 to 90% RH (indoor use only)
Installation	Wall mount (standard), bench top support or panel mount (options).
Protection Grade	IP54

## **INSTALLATION EXAMPLE**

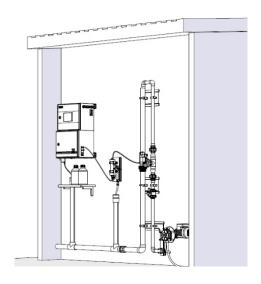

The analyzer is easily installed in a minimum amount of wall space.


In the picture are included the optional accessories:

- a) A46ERLS000 Fast Loop external reservoir with level switch
- b) A46SF10020 Filtration unit 100 micron 230 VAC (other mesh size and input voltages available)
- c) A46SPP0000 Sampling Pump


Other accessories, including external dilutors to increase the analyzer range and different kind of sample reservoirs are also available. See our website for more info.



#### **TECHNICAL DRAWING**

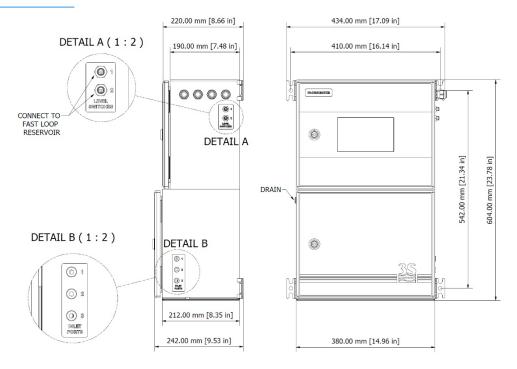

## **HYDRAULIC COMPARTMENT VIEW**

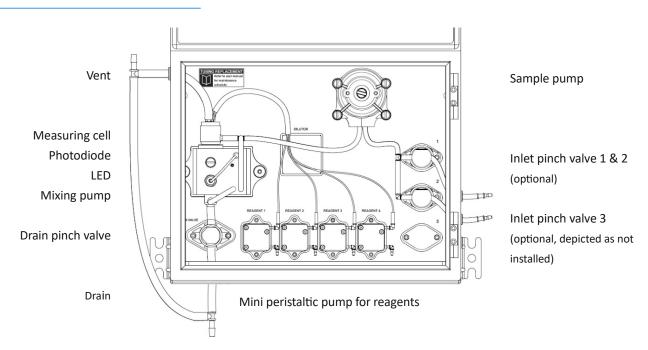

## **PRODUCT CODES**

CL3-3-572-0-16-CN	Free Cyanide Colorimeter, one inlet port, 16 mm cell
CL3-3-525-2-16-CN	Free Cyanide Colorimeter, two inlet ports, 16 mm cell
CL3-3-572-3-16-CN	Free Cyanide Colorimeter, three inlet ports, 16 mm cell
CL3-3-572-0-26-CN	Free Cyanide Colorimeter, one inlet port, 26 mm cell
CL3-3-572-2-26-CN	Free Cyanide Colorimeter, two inlet ports, 26 mm cell
CL3-3-572-3-26-CN	Free Cyanide Colorimeter, three inlet ports, 26 mm cell